

### SWITCH PANEL FUNCTIONS

on  
off

On powering up, the unit goes through an initialisation routine in which all segments of the display are briefly illuminated followed by a countdown from 9 to 1.

I  
M

Press to select either Metric or Imperial units.

zero

Press to zero the instrument.  
Use the probe cap when zeroing.

### TO TAKE READINGS

Switch on, select required units and zero the Instrument by pressing the zero button.

For optimum accuracy the probe cap should be fitted when carrying out this operation.

Hold the probe in the airstream with the arrow on the tip pointing in the direction of the air flow.

air flow   probe

Range	Metric	Imperial
Velocity	0-20 m/sec	0-4,000 ft/min
Temperature	0-80°C	32-176°F

Serial Number

