

Operating manual

EN

GMH 3331

Digital precision handheld measuring device

Members of GHM GROUP:
GREISINGER
HONSBERG
Martens

IMTRON

*Delta*ohm

VAL.CO



Table of contents

1	About this documentation	4
1.1	Foreword	4
1.2	Purpose of the document	4
1.3	Legal notices	4
1.4	Correctness of content	4
1.5	Layout of this document	4
1.6	Further information	5
2	Safety	6
2.1	Explanation of safety symbols	6
2.2	Foreseeable misuse	6
2.3	Safety instructions	6
2.4	Intended use	7
2.5	Qualified personnel	7
3	Description	8
3.1	Scope of delivery	8
3.2	Functional description	8
4	The product at a glance	9
4.1	The GMH 3331	9
4.2	Display elements	9
4.3	Operating elements	10
4.4	Connections	11
4.5	Support stand	11
5	Operation	13
5.1	Commissioning	13
5.1.1	Explanation	13
5.2	Configuration	13
5.2.1	Explanation	13
5.2.2	Opening the configuration menu	13
5.2.3	Configuring parameters of the configuration menu	14
6	Bases for measurement	16
6.1	Special functions	16
6.2	Measurements with the TFS 0100E combination measuring probe	16
6.2.1	Relative air humidity r.H	16
6.2.2	Environmental temperature T1	17
6.2.3	Dewpoint temperature Td	17
6.2.4	Enthalpy h	17
6.2.5	Surface temperature T2	17
6.2.6	Dewpoint distance Δ Td	17
6.3	Measurements with the STS 005 / STS 020 flow measuring probes	
6.3.1	Averaging processes for flow measurement	18
6.3.2	Additionally with optional Typ-K temperature probe on T2	18
6.4	Universal output	18
6.4.1	Interface	19

7	Operation and maintenance	. 21			
7.1	Operating and maintenance notices	. 21			
7.2	Battery				
7.2.1	Battery indicator	. 21			
7.2.2	Changing battery	. 21			
7.3	Relative air humidity measurement adjustment	. 22			
7.3.1	General information for adjustment	. 22			
7.3.2	Automatic adjustment	. 23			
7.3.3	Manual adjustment	. 23			
7.4	Certificates	. 24			
8	Error and system messages	. 26			
9	Disposal				
9 10		. 27			
	Disposal	. 27 . 28			
10	Disposal Technical data	. 27 . 28 . 30			
10 11	Disposal Technical data Spare parts and accessories	. 27 . 28 . 30 . 31			
10 11 12	Disposal Technical data Spare parts and accessories Service	. 27 . 28 . 30 . 31			
10 11 12 12.1	Technical data Spare parts and accessories Service Manufacturer	. 27 . 28 . 30 . 31 . 31			



1 About this documentation

1.1 Foreword

Read this document carefully and familiarise yourself with the operation of the product before you use it. Keep this document ready to hand and in the immediate vicinity of the product so that it is available to the personnel/user for reference at all times in case of doubt.

The product was developed according to the state of the art and fulfils the requirements of the applicable European and national Directives. All corresponding documents are available from the manufacturer.

Only technically qualified persons are permitted to carry out commissioning, operation, maintenance and decommissioning. The qualified personnel must have carefully read and understood the operating manual before beginning any work.

1.2 Purpose of the document

- This document describes the operation and maintenance of the product.
- It provides important information for working safely and efficiently with the product.
- In addition to the quick reference guide with all relevant legal and safety content in hard copy, this document is a detailed reference option for the product.

1.3 Legal notices

The liability and warranty of the manufacturer for damages and consequential damages are voided with misuse, disregarding this document, disregarding safety notices, assignment of inadequately qualified technical personnel and arbitrary modifications of the product.

Only carry out the maintenance and service tasks on this product that are described in this documentation. In the process, adhere to the specified steps. For your own safety, only use original spare parts and accessories of the manufacturer. We assume no liability for the use of other products and resulting damage.

This document is entrusted to the recipient for personal use only. Any impermissible transfer, duplication, translation into other languages or excerpts from this operating manual are prohibited.

The manufacturer assumes no liability for print errors.

1.4 Correctness of content

The contents of this document were checked for corrected and are subject to a continuous correction and updating process. This does not rule out potential errors. In the event that errors are discovered or in case of suggestions for improvement, please inform us immediately via the indicated contact information in order to help us make this document even more user-friendly.

1.5 Layout of this document

Description

Each chapter is explained at the beginning in the description.



Prerequisite

All mandatory prerequisites are then listed for each step.

Instruction

Tasks to be carried out by the personnel / user are represented as numbered instructions. Adhere to the sequence of the specified instructions.

Representation

Shows an illustrative instruction or a configuration of the product.

Formula

Some instructions include a formula for a general understanding of a configuration, programming or a setting of the product.

Outcome of an action

Result, consequence or effect of an instruction.

Emphases

In order to simplify legibility and provide a clearer overview, various sections / information are emphasised.

- Mechanical controls
- Product functions
- Product labels
- Cross-reference [▶ p. 4]
- Foot notes

1.6 Further information

Software version of the product:

- V1.0 or later
- After the product has been switched on with the On/Off button, the current software version can be viewed by pressing the max button and the min button.

B-H77.0.01.DB2-1.0 5 / 32



2 Safety

2.1 Explanation of safety symbols



DANGER

This symbol warns of imminent danger which can result in death, severe bodily injury, or severe property damage in case of non-observance.



CAUTION

This symbol warns of potential dangers or harmful situations which can cause damage to the device or to the environment in case of non-observance.



NOTE

This symbol indicates processes which can have a direct influence on operation or can trigger an unforeseen reaction in case of non-observance.

2.2 Foreseeable misuse

The fault-free function and operational safety of the product can only be guaranteed if generally applicable safety precautions and the device-specific safety instructions for this document are observed.

If these notices are disregarded, personal injury or death, as well as property damage can occur.



DANGER

Incorrect area of application!

In order to prevent erratic behaviour of the product, personal injury or property damage, the product must be used exclusively as described in the chapter Description [p. 8] in the operating manual.

- Do not use in safety / Emergency Stop devices!
- The product is not suitable for use in explosion-prone areas!
- The product must not be used for diagnostic or other medical purposes on patients!

2.3 Safety instructions

This product has been designed and tested according to the safety requirements for electronic measuring devices. The product must be used according to the technical data. Technical data [p. 28].





CAUTION

Erratic behaviour!

On suspicion that the product can no longer be operated without danger, it must be decommissioned and prevented from recommissioning with appropriate labelling. The safety of the user can be impaired by the device if, for example, if it shows visible damage, it no longer works as specified or if it was stored for an extended period of time under unsuitable conditions.

- Visual inspection!
- In case of doubt, send the product to the manufacturer for repair or maintenance!



CAUTION

Avoid overvoltage!

Check the voltage when connecting to a mains adapter. Simple mains adapters can have an excessively high open circuit voltage, which could cause a malfunction or destroy the product.

- Use a suitable mains adapter with a voltage between 10.5 and 12 V DC!
- The operating voltage on the mains adapter must match the mains voltage!



NOTE

The fault-free function and operational safety of the product can only be guaranteed under the climatic conditions specified in the chapter Technical data. If the product is transported from a cold environment into a warm environment, the device can malfunction due to condensate formation. In this case, wait for the assimilation of the device temperature to the environmental temperature.



NOTE

This product does not belong in children's hands!

2.4 Intended use

The product is designed for room climate measurements in combination with the combination measuring probe TFS 0100E. This comprises detection of air humidity, temperature, dewpoint, dewpoint distance and enthalpy.

Together with the flow measuring probes STS 005 and STS 020, the product enables measurement of the flow speed of water and/or air.

2.5 Qualified personnel

For commissioning, operation and maintenance, the relevant personnel must have adequate knowledge of the measuring process and the significance of the measurements. This document makes a valuable contribution to this. The instructions in this document must be understood, observed and followed.

In order to avoid any risks arising from interpretation of the measurements in the concrete application, the user must have additional expertise. The user is solely liable for damages/danger resulting from misinterpretation due to inadequate expertise.

B-H77.0.01.DB2-1.0 7 / 32



3 Description

3.1 Scope of delivery

Please check to ensure the completeness of the product after opening the package. You should find the following components:

- Handheld measuring device, ready for operation, including battery
- Operating manual

3.2 Functional description

The product is a universal precision hygrometer/thermometer with flow meter and additional thermocouple input in a single device. The interchangeable probes can be change without recalibration, because they store their calibration data in an integrated buffer and/or are interchangeable due to the high mechanical precision.

The product can be switched on, switched off and configured and the measurements and parameters can be adjusted and held with the operating elements. The product has a universal output, a sensor connection and a temperature input. The T2 thermocouple input is optimised to detect surface temperatures, for example, in order to be able to display the distance from the dewpoint directly.



4 The product at a glance

4.1 The GMH 3331





4.2 Display elements

Upper display bar

CAL Humidity calibration

,

m/s Unit

r.H. Relative air humidity in %

If humidity calibration is in progress, an arrow ap-

pears under CAL

The flow speed is displayed in m/s in the main dis-

play

If a relative air humidity measurement is active, an arrow is displayed below r.H.

Main display



TFS 0100E

Measurement of the current relative air humidity in %

STS 005 / STS 020

Measurement of the current flow speed in m/s

Auxiliary display



TFS 0100E

T1: Temperature of the TFS 0100E Td: Dewpoint temperature of the air

kJ/kg: Enthalpy

With sensor at temperature input: T2

T2: Surface temperature

ΔTd: Dewpoint distance T2 – Td

STS 005 / STS 020

t.AVG: Remaining time until display of the average flow value in s

With sensor at temperature input: T2

T2: Temperature

Lower display bar

Corr Correction factor

Was a customer-side sensor calibration carried, an

arrow is displayed above Corr

B-H77.0.01.DB2-1.0 9 / 32



An arrow indicates which value is displayed in the

secondary display

kJ/kg Enthalpy Kilojoules per kilogramme

ΔTd Dewpoint distance T2 - Td

Td Dewpoint temperature of Unit in °C or °F

the air

T2 Surface temperature Unit in °C or °F T1 Temperature of the TFS Unit in °C or °F

0100E

4.3 Operating elements



On / Off button

Press briefly Switch on the product Long press Switch off the product



max / min button



Press briefly Min measured value

Max measured value

Value input and changes to settings in configuration

Long press Delete Min/Max measured value



cal button

Press 2s Start humidity calibration

Press 10s Reset humidity calibration to factory calibration



set button

Press briefly Change of the secondary display: kJ/kg Δ Td, Td,

T2, T1

Press 2s View the configuration



store button

In a measuring Hold the current measurement

Start a new measurement

Operation of the logger function

In menus Confirmation of the entry

Return to measuring




4.4 Connections

Output OUT Connection for galvanically isolated interface ad-

apter e.g. GRS 3100, GRS 3105, USB 3100

Analogue output (only GMH 3351)



The 3rd contact has to be left floating! Only stereo

plugs are allowed!

Sensor connection TFS 0100E, air humidity and temperature T1

STS 020, air flow speed. 0.55 .. 20 m/s STS 005, water flow speed. 0.05 .. 5 m/s

Temperature input T2 Connection for temperature probe type K for meas-

urement of surface temperatures

Dc connector



This is located on the left side of the product

4.5 Support stand

Description

Instruction


The stand is provided as a means to prop up or support the device in a stable surface, for hanging on the wall or for attachment to a belt.

- 1. Leave the stand collapsed in order to lay the product flat on a stable surface or to hang it on a belt.
- 2. Pull the grip labelled **open** in order to fold it out to a 90° angle. Now, the product can be positioned on a stable surface.
- 3. Pull the grip labelled **open** again in order to fold it out to a 180° angle. Now the product can be hung.

B-H77.0.01.DB2-1.0 11 / 32



Representation

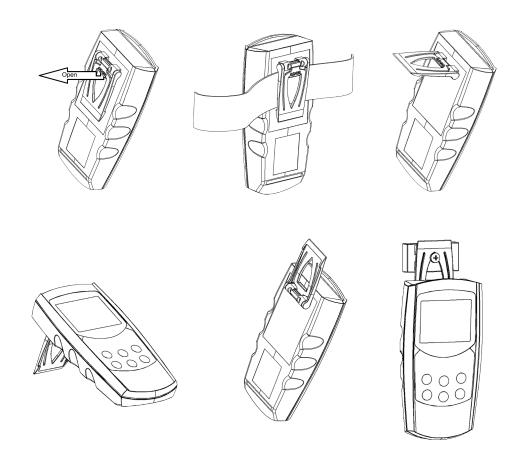

Outcome of an action

The product can be positioned ideally so that the display can always be read clearly and easily depending on its use.



5 Operation

5.1 Commissioning

5.1.1 Explanation

Description The product is so

The product is switched on with the On/Off button. It may be necessary to configure

the product after switching on. See Configuration [▶ p. 13].

Prerequisite – Press the *On/Off button*.

Instruction

Outcome of an action Information about the configuration of the product appears in the display.

- The product is now ready for measurement.

5.2 Configuration

5.2.1 Explanation

The following steps describe how to adapt the product for your purposes.



NOTE

There are various configuration parameters available depending on the product version and configuration. They can differ depending on the product version and configuration.

5.2.2 Opening the configuration menu

Description

In order to configure the product, you must first open the *Configuration* menu. The menu is opened as shown in the illustration.

Prerequisite Instruction

- 1. Press the *Function key* for 2 seconds to open the *Configuration* menu.
- 2. 5Et ConF appears in the display. Release the function key.
- By briefly pressing the set button, you can scroll through the submenu of the Configuration menu. Select the parameter you would like to configure with the cal button.
- 4. When you have selected the desired parameter, change the parameter to the desired value with the *max* button and the *min* button.
- 5. The changes are saved by pressing the *set* button again.
- 6. The *Configuration* menu is exited with the *store* button.

Representation

Call up menu Select sub-Select para-Change value Exit menu and menu meter save changes set cal store set min max Press: Single step Hold: Rapid change

Outcome of an action

You exit the *Configuration* menu with the *store* button and return to the main display.

B-H77.0.01.DB2-1.0





NOTE

Menu

Para-

If the product is switched off without saving the configuration, the last save value is reproduced on the next start-up of the product.

5.2.3 Configuring parameters of the configuration menu

Description
Prerequisite
Instruction

- The *Configuration* menu is open. See Opening the configuration menu.
- 1. Select the desired submenu item with the set button.

Value

- 2. Select the desired parameter you would like to configure with the *cal* button.
- 3. Adjust the desired configuration in the selected parameter with the *max* button and *min* button.
- 4. Confirm your selection with the *set* button or with the *cal* button.
- 5. The available configuration options are listed for each parameter in the following representation.

Meaning

Representation

Wichia	meter	Value	Meaning
set menu 4	cal	min max 5	
General s	ettings		
SEL Conf			General settings
			* Only if there is no logger data in the data buffer
	* RUG		Averaging process only with the STS 005 / STS 020
		Cont	Averaging in progress
		hoLd	Averaging process at the push of a button
	* E.RUG		Duration of the averaging process in s only with the STS 005 / STS 020
		130	
	* Unlt		Temperature unit
		°Ε	
		°F	
	P.oFF		Auto Power-Off
		1120	Shut-down delay in min
		oFF	Deactivate
Interface	and analog	ue output	
SEŁ ouŁ			Interface and analogue output
	out		Universal output
		oFF	No output function, minimum power consumption
		SEr	Universal output is serial interface
	Rdr.		Address if oUt = 5Er
		01, 11 91	Base address of the interface

0.950 .. 1.200

oFF



Sensor calibration

Sensor calibration SEŁ Corr T1 zero point shift only with TFS 0100E oF5.1 -10.0 °C .. 10.0 °C -18.0 °F .. 18.0 °F oFF Deactivated T2 zero point shift oF5.2 -10.0 °C ... 10.0 °C -18.0 °F .. 18.0 °F Deactivated oFF T2 display correction factor SEF.2

Outcome of an action

The changed value is stored. The *Configuration* is closed by pressing the *store* button.

Deactivated



NOTE

The configuration is closed if no button is pressed for 2 minutes. Any changes made up to that point are not saved.

B-H77.0.01.DB2-1.0 15 / 32



6 Bases for measurement

6.1 Special functions

Zero point shift

A zero point shift can be made for each of the two temperature channels T1 (only TFS0100) and T2.

Displayed temperature = measured temperature - zero point shift

Standard setting is off. That means 0.0° and that a zero point shift cannot take place. The zero point shift is used primarily to compensate for sensor deviations. If a different value than off is adjusted, it is displayed briefly when the device is switched on and indicated by the Corr arrow in the display during operation.

Display correction factor

This factor only has an effect on the Typ-K input T2.

[°C]: Displayed temperature = measured temperature * Corr

[°F]: Displayed temperature = (measured temperature - 32 °F) * Corr + 32 °F

Standard setting is off = 1.000

This factor is provided to compensate for thermal transition losses in surface measurements. These occur when very high temperatures of objects should be measured, the surface of which is cooled down by the cooler environment. Similar effects can also occur with sensors with a greater mass. If a different value than off is adjusted, it is displayed briefly when the device is switched on and indicated by the Corr arrow in the display during operation.

Base address

Multiple products can be queried simultaneously via an interface using the GRS3105 interface converter. For this purpose, it is prerequisite that all products have a different base address. If multiple products are connected together via an interface, the base addresses must be configured accordingly.

Channel 1 of the product is addressed via the adjusted base address. Channels 2 to 6 have the following addresses.

Base address 21 + Channel 1 = 21

+ Channel 2 = 22

etc.

6.2 Measurements with the TFS 0100E combination measuring probe

The TFS 0100 is specially developed for room climate measurement. TFS 0100 probes are not interchangeable without recalibration. It includes a sensor for measurement of relative air humidity and a sensor for measurement of environmental temperature T1.

6.2.1 Relative air humidity r.H.

Air humidity measured in the probe tip with 0.1% resolution.

Formula

Formula

Example

16 / 32

B-H77.0.01.DB2-1.0



6.2.2 Environmental temperature T1

Temperature measured in the probe tip. 0.1°C or 0.1°F resolution. Additional display values are calculated according to the Mollier diagram of the product:

6.2.3 Dewpoint temperature Td

Cold air can absorb less water vapour than warm air. Consequently, as the temperature decreases, the relative air humidity increases. If 100% is reached, the air is saturated with water vapour, and additional cooling has the effect that part of the water vapour condenses into water and is visible as mist or precipitation (dew).

The dewpoint temperature indicates the temperature at which 100% saturation is reached and from which dew should be expected.

6.2.4 Enthalpy h

Enthalpy indicates the energy content of the air. This value is based on dry air at 0 °C and 0 % relative air humidity. In other words, air with 0 % relative air humidity and 0 °C has the energy content 0 kJ/kg. The warmer the air is and the higher the relative air humidity is, the greater the energy content will be. As a result, it is apparent that more energy is required to heat up humid air than dry air.



NOTE

All display values calculated from the humidity and temperature measurements are based on normal air pressure of 1013 mbar. The deviations for measurement of atmospheric air are negligible. The values must be corrected based on suitable tables for measurements in pressure vessels and similar equipment.

6.2.5 Surface temperature T2

Surface temperatures, etc. can be measured with the second temperature channel.

6.2.6 Dewpoint distance Δ Td

This measurement relates to measurements T1, T2 and the relative air humidity.

The environmental air is measured with the combination probe and the dewpoint Td is calculated from its status.

Now surfaces in this environmental air can be measured with the surface probe, wherein ΔTd indicates the temperature difference from the dewpoint.

Example:

The measurement of the room air provides a Td of 5 °C. As long as the surface temperature of a pane is >5 °C (Δ Td is positive), the pane is not misted over. If the surface temperature is less than 5 °C (Δ Td is negative), the pane will mist over.

Additional application examples:

Locating damp corners, monitoring of heat exchangers or weather forecasting.

6.3 Measurements with the STS 005 / STS 020 flow measuring probes

There are two types of measuring probes available for measurement of flow speed:

STS 005 measures the flow of water

B-H77.0.01.DB2-1.0 17 / 32



- STS 020 measures the flow of air

When used incorrectly, the measurement result is unusable!

Observe maximum measuring ranges!

- STS 005: 0.05 .. 5.00 m/s (water)

- STS 020: 0.5 .. 20.00 m (air)

Higher speeds can destroy the measuring head or at least permanently impair the measuring accuracy. The specified flow direction is marked with an arrow on the measuring head.

Flow measuring probes are free-jet calibrated, i.e. the diameter of the flow channel to be measured must be at least 5 times the diameter of the flow measuring head. Approx. 5 cm, otherwise there will be a measuring error of up to 40%!

When evaluating the measurement results, also observe that the flow speed in the middle of a channel is higher than at the edge of the channel. There are relevant tables for calculation of the airflow rate based on the flow speed.

6.3.1 Averaging processes for flow measurement

Significant measurement fluctuations usually occur with measurements of flows. Two averaging processes can be integrated in order to display a stable measurement:

6.3.1.1 Continuous averaging

This displayed average is calculated from the last measurements over the time period of the adjusted averaging time and displayed. After the device has been switched on, the remaining time until the averaging time has expired is displayed in the lower display line. The Min and Max values are based on the smallest and largest displayed average.

6.3.1.2 Averaging at the push of a button (Average Hold)

After the product is switched on, it begins to generate the average of the flow measurement for the duration of the averaging time. The current measurement appears in the main display during the measurement and the remaining measuring time appears in the secondary display. After the measurement is completed, the average is displayed and the product switches to HOLD mode. The Min and Max values are based on the smallest and largest measurement while the average is being calculated.

The store button must be pressed to start a new measurement.

6.3.2 Additionally with optional Typ-K temperature probe on T2

The temperature of the medium, for example, can be measured with temperature channel T2. The unaveraged measurement is display.

6.4 Universal output

The output can be used as a serial interface (for USB 3100, USB 3100N, GRS 3100 or GRS 3105 interface converters). If the output is not required, it should be deactivated, put of FF. The battery consumption will be drastically reduced as a result.



6.4.1 Interface

The product can be connected directly to a USB interface of a PC with a galvanically isolated interface converter. Transmission takes place in a binary coded format and is protected against transmission errors with elaborate safety mechanisms (CRC).

Software:

- Standard software packages are available for purchase online at www.greisinger.de.
- A Windows function library with program examples for development of custom software is available for purchase, as well as the freely available interface description.



NOTE

The following measurement, alarm and range values output via the interface are always output based on the adjusted base address.

Supported interface functions:

Channel as- signment				Code	Name/function		
1	2	3	4	5	6	-	
Χ	Χ	Χ	Χ	X	Χ	0	Read current value
Χ	Χ	Χ				3	Read system status
Χ						12	Read ID number
1	1	1	1	1	1	22	Read Min. alarm limit
1	1	1	1	1	1	23	Read Max. alarm limit
2						32	Read configuration flag
2						160	Set configuration flag
Χ	Χ	Χ	Χ	Χ	Χ	199	Read measurement type display
Χ	Χ	Χ	Χ	Χ	Χ	200	Read minimum display range
Χ	Χ	Χ	Χ	Χ	Χ	201	Read maximum display range
Χ	Χ	Χ	Χ	Χ	Χ	202	Read display range unit
Χ	Χ	Χ	Χ	Χ	Χ	204	Read display range decimal point
Χ						208	Read number of channels
	Χ	Χ				216	Read offset
		Χ				218	Read correction factor
Χ						240	Sensor module reset
Χ						254	Read program identification

^{1 =} Only possible when alarm is activated for the relevant channel.

6.4.2 Channel assignment

The assignment of channels depends on which temperature probe or sensor is connected to the product.

TFS 0100E

B-H77.0.01.DB2-1.0

^{2 =} Available configuration flags 50: 0 = Logger off; 1 = Logger on.

⁼ Available configuration flags 51: 0 = Manual logger; 1 = Cyclical logger.



Channel 1	Relative air humidity
Channel 2	Temperature T1
Channel 3	Temperature T2
Channel 4	Dewpoint temperature Td
Channel 5	Dewpoint distance Δ Td
Channel 6	Enthalpy h

STS 005 / 020

Channel 1	Flow speed
Channel 2	Not supported. (NoAck or error code)
Channel 3	Temperature T2
Channel 4	Not supported. (NoAck or error code)
Channel 5	Not supported. (NoAck or error code)
Channel 6	Not supported. (NoAck or error code)

Temperature probe Typ-K without TFS / STS

Channel 1	Not supported. (NoAck or error code)
Channel 2	Not supported. (NoAck or error code)
Channel 3	Temperature T2
Channel 4	Not supported. (NoAck or error code)
Channel 5	Not supported. (NoAck or error code)
Channel 6	Not supported. (NoAck or error code)



7 Operation and maintenance

7.1 Operating and maintenance notices



NOTE

Plugs and sockets must be protected from soiling.



NOTE

If the product is stored at a temperature above 50 °C, or is not used for an extended period of time, the batteries must be removed. Leaks from the batteries are avoided as a result



NOTE

The product, measuring sensor and temperature probe must be handled with care and used in accordance with the technical data. Do not throw or strike. Contaminants can influence the measurement negatively. Use of an unsuitable measuring sensor or temperature probe can damage said devices or the product.



NOTE

The product must be switched off to change the measuring sensor, the temperature probe, electrode, interface or mains adaptor. It must not be disconnected by pulling the cable; pull the plug only.

7.2 Battery

7.2.1 Battery indicator

If the bAL display text appears in the main display, the battery voltage is no longer adequate for operation of the product. The battery is fully depleted.

If bRE appears in the display with a warning triangle, the battery is low and should be replaced soon. However, the device will still operate for a certain length of time.

7.2.2 Changing battery

Description

Proceed as follows to replace the batteries.

Prerequisites

The product is switched off.

Instruction

- Open the cover of the product by carefully pushing it back and away from the product.
- 2. Pull the battery out of the compartment and disconnect it.
- 3. Ensure correct polarity when replacing the battery!
- 4. Insert the battery in the compartment. Then position the cover correctly and slide it in until it engages.

Outcome of an action

The product is now ready for use again.

B-H77.0.01.DB2-1.0 21 / 32



7.3 Relative air humidity measurement adjustment

Due to the natural ageing of the polymer humidity sensor of the TFS 0100E, readjustment the probe at least once annually is recommended in order to guarantee optimal measurement accuracy. The product can be sent in to the manufacturer for precise readjustment with linear control. A adjustment function is integrated for 2-point local adjustment.

7.3.1 General information for adjustment

Automatic calibration

The following humidity measurement standards are permitted for automatic buffer recognition:

Name	Relative air humidity at 20° C	Calibration device
KNO3	93%	
NaCl	76%	GFN 76
MgCl2	33%	GFN 33
Silica gel	0%	

The GFN xx adjustment devices are optimised for the application with the TFS 0100E. Only these humidity measurement standards are recommended in order to obtain the most exact adjustment possible. Refer to the accompanying instructions for the exact use and handling.

If a value of > 50% has been selected for adjustment point 1, a value < 50% must be used for adjustment point 2. If the value for adjustment point 1 is < 50%, the value for adjustment point 2 must be > 50%.

Manual adjustment

Arbitrary values between 0% and 100% r.H. can be used. However, the difference between the two values must be at least 40%.

Automatic temperature compensation for the adjustment

The relative air humidity adjusted in the adjustment devices is partly heavily dependent on temperature. When adjustment with the specified adjustment devices , recognition takes place automatically and this dependency is compensated for automatically. If adjustment values are entered manually, it must be ensured that the relevant values are entered for the appropriate temperature.



NOTE

Adjustment is only possible in the temperature range of 5 °C .. 40 °C.

Permissible sensor deviation

Adjustmentis only possible if the deviation of the humidity sensor is less than approx. +/- 10% r.H.. If the deviation is greater, the main display of the product shows the error message Err9 for approx. 2s and the secondary display shows the detected humidity value. Then the stability test restarts.

In this case, please check your humidity standard. If it is correct, it must be assumed that the sensor no longer functions correctly. Please sent the product to the manufacturer for testing.

Stability criterion

- The humidity value does not change by more than 0.5% r.H. within 20s.



- Temperature T1 does not change by more than 0.5 °C within 20s.

7.3.2 Automatic adjustment

Description

If the preset humidity standards are used, automatic adjustment must be selected.

General information for adjustment [▶ p. 22]

- A suitable TFS 0100E sensor must be connected.

Prerequisite

- The product is switched on.

Instruction



Adjustment can be interrupted at any time with the *set* button. In this case, the existing adjustment remains in effect.



NOTE

If you press and hold the *cal* button for 10 seconds, the device will be reset to the factor adjustment.

- 1. If you press the *cal* button for 2 seconds, A.Pt. 1 will appear in the secondary display.
- 2. If the main display switches between the individual values, no valid, stable value has been recognised. Observe the stability criteria in the chapter General information for adjustment [* p. 22].
- 3. If the error message *Err* briefly appears, observe the permissible sensor deviation in the chapter General information for adjustment [▶ p. 22].
- 4. Once the display no longer blinks and no longer switches, a valid and stable value has been found and can be adopted with the *store* button.
- 5. R.Pt. 2 appears in the secondary display. Now insert the TFS0100E sensor into the calibration device for the second humidity value. Observe the permissible calibration points in the chapter General information for adjustment [> p. 22].
- 6. If the main display switches between the individual values, no valid, stable value has been recognised. Once the display no longer blinks and no longer switches, a valid and stable value has been found and can be adopted with the *store* button.
- 7. The product restarts and switches to normal operating mode.

Outcome of an action

The product is now adjusted.

7.3.3 Manual adjustment

Description

If values other than those provided in the automatic adjustment should be used, manual adjustment must be selected.

Prerequisite

- The product is switched on.
- A suitable temperature probe or sensor is connected.

Instruction

B-H77.0.01.DB2-1.0 23 / 32





NOTE

Adjustment can be interrupted at any time with the set button. In this case, the existing adjustment remains in effect.

If you press and hold the *cal* button for 10 seconds, the device will be reset to the factor adjustment.

- 1. Press and hold the *cal* button for 2 seconds and then press the cal button again so that *P*Ł. 1 appears in the secondary display.
- 2. The value of the buffer is adjusted with the with the max button and the min button. Observe the permissible temperature compensation for the adjustment in the chapter General information for adjustment [\triangleright p. 22].
- 3. A valid, stable value has not been recognised as long as the display is blinking. Observe the stability criteria in the chapter General information for adjustment [p. 22].
- 4. Once the display no longer blinks, a valid and stable value has been found and can be adopted with the *store* button.
- 5. If the error message *Err* briefly appears, observe the permissible sensor deviation in the chapter General information for adjustment [p. 22].
- 6. If no error message appears, the value has been adopted successfully and the second adjustment point can be entered.
- 7. Pt. 2 appears in the secondary display. Now insert the TFS0100E sensor into the adjustment device for the second humidity value. Observe the permissible adjustment points in the chapter General information for adjustment [p. 22].
- 8. The value is adjusted with the with the *max* button and the *min* button. Observe the permissible temperature compensation for the adjustment in the chapter General information for adjustment [▶ p. 22].
- 9. A valid, stable value has not been recognised as long as the display is blinking. Observe the stability criteria in the chapter General information for adjustment [p. 22].
- 10. Once the display no longer blinks and no longer switches, a valid and stable value has been found and can be adopted with the *store* button.
- 11. If the error message *Err* briefly appears, observe the permissible sensor deviation in the chapter General information for adjustment [▶ p. 22].
- 12. If no error message appears, the value has been adopted successfully. The product restarts and switches to normal operating mode.

Outcome of an action

The product is now adjusted and ready for measurement.

7.4 Certificates

The certificates are categorised as ISO calibration certificates and DAkkS calibration certificates. The purpose of the calibration is to verify the precision of the measuring device by comparing it with a traceable reference.



NOTE

The ISO standard 9001 is applied for the calibration certificates. These certificates area affordable alternative to the DAkkS calibration certificates and provide information of the traceable reference, a list of individual values and documentation.





NOTE

The DAkkS calibration is based on DIN EN ISO/17025, the accreditation basis recognised worldwide. These certificates offer high-quality calibration and consistently high quality. DAkkS calibration certificates can only be issued by accredited calibration laboratories which have demonstrated their expertise in accordance with DIN EN ISO/IEC 17025. The DAkkS calibration includes any necessary adjustment with the purpose of minimising a deviation of the measuring device.

DAkkS calibration certificates are accompanied with a list of individual measurements before and after the adjustment, documentation and, if applicable, graphic representation, calculation of the expanded measuring uncertainty and traceability to the national standard.



NOTE

The product is delivered with a test report. This confirms that the measuring device has been adjusted and tested.



NOTE

Only the manufacturer can check the basic settings and make corrections if necessary.

B-H77.0.01.DB2-1.0 25 / 32



8 Error and system messages

Display	Meaning	Possible causes	Remedy
SEnS Erro	No probe or sensor connected	Sensor or probe missing	Connect sensor or probe Connect different sensor or
	Sensor or probe defect	Defective sensor or probe	probe
	Measuring range exceeded or undercut	•	Readjust measuring range
No display,	Battery depleted	Battery depleted	Replace battery
unclear char-	System error	Error in the product	Send in for repair
acters or no response when but- tons are pressed	Product is defective	·	·
₽₩£ blinks	Battery low	Battery low	Replace battery
P&F	Battery depleted	Battery depleted	Replace battery
CAL Err.I	Zero point calibration defective		
Err.l	Measuring range exceeded	Measurement too high	The measurement is above the permissible range
		Measuring probe, sensor or product	Test measuring probe or sensor
		defect	Send in for repair
Err.2	Measuring range is undercut	Measurement too low	The measurement is below the permissible range
		Measuring probe, sensor or product	Test measuring probe or sensor
		defect	Send in for repair
Err.3	Display range has been exceeded	Value is too high	Adjust measuring range
Err.4	Display range has been undercut	Value is too low	Adjust measuring range
Err.7	System error	Error in the product	Switch the product on/off
			Replace batteries
			Send in for repair
Err.9	Sensor/probe not	Sensor/probe not connected	Switch the product on/off
	available		Connect sensor/probe
	Sensor/probe error	Sensor/probe defect	New sensor/probe
Err.II	Measurement value could not be calcu-	Measurement variable not available	Change/adjust measure- ment variable
	lated	Incorrect unit setting	Enter suitable unit



9 Disposal

Separation by material and recycling of device components and packaging must take place at the time of disposal. The valid regional statutory regulations and directives applicable at the time must be observed.



NOTE

The device must not be disposed of with household waste. Return it to us, freight prepaid. We will then arrange for the proper and environmentally-friendly disposal.

Private end users in Germany have the possibility of dropping off the product at the municipal collection centre.

Please dispose of empty batteries at the collection points intended for this purpose.



NOTE

Fill in the return form available from the information base online at www.ghm-group.de and sent it in with the product.

B-H77.0.01.DB2-1.0 27 / 32

See probe for measuring range



10 Technical data

0.0 .. 100.0 % relative air humidity Measuring ranges Humidity

with probe TFS

0100E

-40.0 .. +120.0 °C Room temperature (T1)

-80.0 .. +250.0 °C Surface temperature (T2)

Calculated vari-

ables

Dewpoint temperature -40.0 .. +70.0 °C -200.0 .. +290 °C Dewpoint distance Enthalpy 0.0 .. 250.0 kJ/kg

Measuring range Flow speed

Surface temperature (T2) -80.0 .. +250.0 °C

with probe STS 005 and/or STS

Device accuracy

(at nominal tem-

(± 1Digit)

perature)

020

± 0.1 % Relative air humidity ± 0.2 °C Room temperature

±0.5 % of measurement ±0.5 °C Surface temperature

± 0.1 % Flow speed

ure input(T2)

Surface temperat- Reference junction accur- ± 0.5 °C

acy

Temperature drift 0.01 %/K 1..30 s Average determination

Operating condi-

Flow speed

tions

-25 .. +50 °C; 0 .. 95 % r.H. (non-condensing)

25 °C Nominal temperat-

ure

Storage temperature

Connections TFS 0100E and STS... 6-pole mini-DIN socket with a maximum cable length of < 10 m

-25 .. +70 °C

Surface temperature Miniature flat plug connector for type K thermocouple with a

maximum cable length of < 3 m

Interface serial, (3.5 mm jack socket), via galvanically isolated interface

> converter GRS3100, GRS3105 or USB3100 (accessory) that can be connected directly to the RS232 or USB interface of a PC

ext. Power supply Mains device socket (Ø1.9 mm inner pin) for external 10.5-12V

DC voltage supply (suitable mains device: GNG10/3000) with a

maximum cable length of 3 m

Display 4-digit 7-segment (main and secondary display) with additional

symbols

Housing Break-proof ABS housing

> Protection rating Front-side IP65

Dimensions, 142 x 71 x 26 mm (L x W x H) Weight approx. 170 g (incl. battery)

Current supply 9V battery, (included in the scope of delivery) or external power

supply

Approx. 2.5 mA (incl. TFS 0100E)

Directives and standards The devices conform to the following Directives of the Council

for the harmonisation of legal regulations of the Member States:

2014/30/EU EMC Directive

2011/65/EU RoHS

Applied harmonised standards:

28 / 32

Current requirement



EN 61326-1:2013 Emission limits: Class B Immunity according to Table 1 Additional error: < 1 % FS

EN 50581:2012

B-H77.0.01.DB2-1.0 29 / 32



11 Spare parts and accessories

A selection of spare parts and accessories for this product is listed below.

Article

Number	Name	Description
600273	GNG 10/3000	Plug/mains adapter
601092	USB 3100 N	Interface converter, galvanically isolated
601336	GSOFT 3050	Software for adjustment, reading data and printing the stored logger data of products of the GHM 3000 series with logger function
601132	GOF 400VE	Quick-response surface probes for walls, floors etc.
601074	ST-RN	Protective sleeve with punched sensor connections
601062	GKK 3600	Case with nap foam
601488	TFS 0100E	Air humidity / temperature probe
603438	TFS 0100E-POR	Air humidity / temperature probe with plastic pore filter
602396	STS 005	Flow / measuring probe
602397	STS 020	Flow / measuring sensor with snap-on head
601097	GRS 3100	Interface converter
601099	GRS 3105	5-fold interface converter, incl. 9-pole Dsub extension cable and 5 type VEKA 3105 connecting cables

A complete list of all accessories and spare parts is available in our product catalogue or on our home page. We can also provide further information by phone.

Contact

Internet:www.greisinger.de

Tel: +49 94029383-52



12 Service

12.1 Manufacturer

If you have any questions, please do not hesitate to contact us:

Contact GHM Messtechnik GmbH

GHM GROUP - Greisinger

Hans-Sachs-Str. 26

93128 Regenstauf | GERMANY

Email: info@greisinger.de | www.greisinger.de

WEEE reg. no. DE 93889386

CE

12.2 Repairs processing

Defective products are repaired professionally and quickly in our service centre.

Open hours and contact

Monday to Thursday from 8:00 to 16:00

Friday from 8:00 to 13:00 GHM Messtechnik GmbH GHM GROUP - Greisinger

Hans-Sachs-Str.26 Service Centre

93128 Regenstauf | GERMANY

Tel: +49 94029383-39 Fax: +49 94029383-33 service@greisinger.de



NOTE

Fill in the return form available from the information base online at www.ghm-group.de and sent it in with the product.

12.3 Sales offices

North Sales Office

Post code: 00000 – 25999 | 27000 – 34999

37000 - 39999 | 98000 - 99999

Email: vertrieb-nord@ghm-messtechnik.de

Tel: +49 4067073-0 Fax: +49 4067073-288

West Sales Office

B-H77.0.01.DB2-1.0 31 / 32



Post code: 26000 – 26999 | 35000 – 36999

40000 - 69999

Email: vertrieb-west@ghm-messtechnik.de

Tel: +49 2191 9672-0 Fax: +49 2191 9672-40

South Sales Office

Post code: 70000 – 97999

Email: vertrieb-sued@ghm-messtechnik.de

Tel: +49 9402 9383-52 Fax: +49 9402 9383-33

12.4 Sales subsidiaries

Austria

GHM Messtechnik GmbH

Office Austria

Breitenseer Str. 76/1/36 1140 Vienna | AUSTRIA Phone +43 660 7335603 a.froestl@ghm-messtechnik.de Brazil & Latin America

GHM Messtechnik do Brasil Ltda Av. José de Souza Campos, 1073, cj 06

Campinas, SP 13025 320 | BRAZIL Phone +55 19 3304 3408 Info@grupoghm.com.br Czech Republic / Slovakia

GHM Greisinger s.r.o. Ovci hajek 2 / 2153 158 00 Prague 5

Nove Butovice | CZECH REPUBLIC

Phone +420 251 613828 Fax +420 251 612607

info@greisinger.cz | www.greisinger.cz

Denmark

GHM Maaleteknik ApS

Maarslet Byvej 2

8320 Maarslet | DENMARK Phone +45 646492- 00 Fax +45 646492- 01

info@ghm.dk | www.ghm.dk

Italy for Greisinger & Delta OHM

GHM GROUP - Delta OHM

Via Marconi 5

35030 Caselle di Selvazzano

Padova (PD) | ITALY Phone +39 049 8977150 a.casati@ghm-messtechnik.de

South Africa

GHM Messtechnik SA (Pty) Ltd

16 Olivier Street

Verwoerdpark, Alberton 1453

SOUTH AFRICA

Phone +27 74 4590040 j.grobler@ghm-sa.co.za

France

GHM GROUP France SAS

Parc des Pivolles 9 Rue de Catalogne

69150 Décines-Charpieu (Lyon) | FRANCE

Phone +33 4 72 37 45 30 a.jouanilou@ghm-group.fr

Italy for Honsberg, Martens, Val.co

GHM GROUP – Val.co Via Rovereto 9/11

20014 S. Ilario di Nerviano

Milano (MI) | ITALY Phone +39 0331 53 59 20 alessandro.perego@valco.it India

GHM Messtechnik India Pvt Ltd. 209 | Udyog Bhavan | Sonowala Road Gregaon (E) | Mumbai - 400 063

INDIA

Phone +91 22 40236235

info@ghmgroup.in | www.ghmgroup.in

Netherlands

GHM Meettechniek BV

Zeeltweg 30

3755 KA Eemnes | NETHERLANDS

Phone +31 35 53805-40 Fax +31 35 53805-41

info@ghm-nl.com | www.ghm-nl.com