

## HAY THERMOMETER



## HIGHLIGHTS:

- Fiberglass probe 4 meter long
- Backlight
- Alarm function

## HayTemp 1700

Art. no. 611377

Hay temperature measuring device

## General:

Stored hay or straw, etc. is prone to overheating (depreciation) or even self-ignition, because of biological processes. This problem is even emphasized with higher moisture contents. Therefore a regular temperature check is crucial. The HayTemp 1700 optimally supports farmers as well as firefighters.

## Application:

Hay or straw measurements at depth up to 4 m.

## Specifications:

<b>Device:</b>	G 1700
<b>Probe connection:</b>	BNC, Pt1000, 2-wire
<b>Measuring rod:</b>	Fiberglass probe, approx. 4 m long, approx. 10 mm Ø, 1 measuring point at probe tip
<b>Cutting tip:</b>	screwable, double-edged tip with integrated temperature sensor
<b>Weight:</b>	Measuring rod with cutting tip approx. 600 g
<b>Scope of supply:</b>	Device, fiberglass rod, probe tip Pt1000, BNC cable (1.5 m), battery, manual

## Accessories and spare parts:

## G 1700

Art. no. 609826

Waterproof alarm thermometer for exchangeable probes BNC

## Fiberglasrohr

Art. no. 604407

4 m, without probe and without tip

## Sondenspitze

Art. no. 606889

With integrated temperature sensor

## Kabel BNC/BNC

Art. no. 602855

Connection cable with 1.5 m length


## ST-G1000

Art. no. 611373

Protection bag, leather

Instruments for hay and straw humidity measurements: see BaleCheck page 58!

## SOIL THERMOMETER

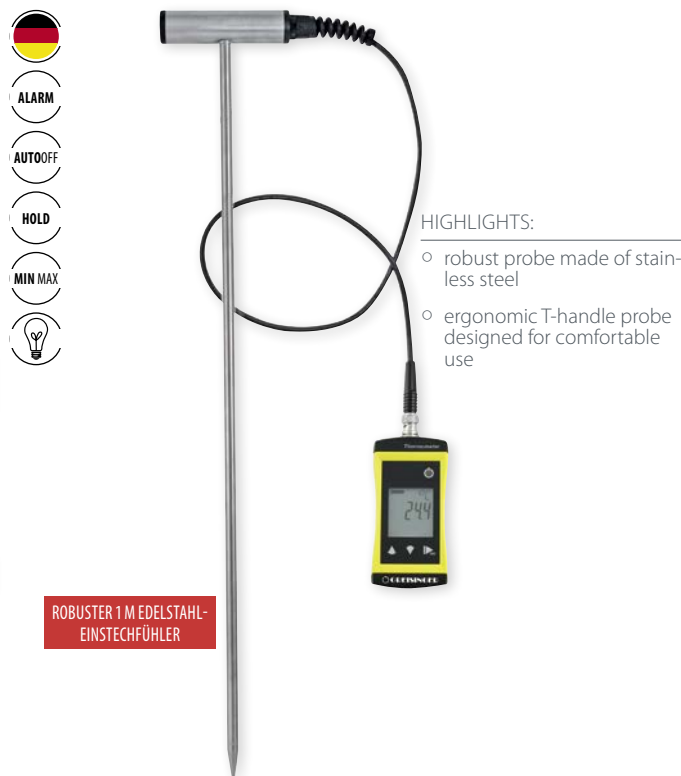

## HIGHLIGHTS:

- robust probe made of stainless steel
- ergonomic T-handle probe designed for comfortable use

## SoilTemp 1700

Art. no. 611374

robust soil / compost thermometer

## General:

The universal display device combined with an extremely robust, but yet ergonomic T-handle probe made of stainless steel allows multiple measurements in soils or bulk materials.

## Application:

Silo checking, measurements in soils, waste dumps, silages, compost, etc.

## Specifications:

<b>Device:</b>	G 1700
<b>Probe connection:</b>	BNC, Pt1000, 2-wire
<b>Measuring range:</b>	-50.0 ... +250.0 °C
<b>Measuring rod:</b>	Stainless steel, 1000 mm x Ø 10 mm, 1 m connection cable with BNC plug, 350 g, probe handle designed for comfortable use
<b>Scope of supply:</b>	Device, GTF 40 T-1000, battery, manual

## Accessories and spare parts:

## G 1700

Art. no. 609826

Waterproof alarm thermometer for exchangeable probes BNC

## GTF 40 T-620

Art. no. 606803

Stainless steel insertion probe, t-handle, FL 620 mm, with 1 m cable and BNC plug

## GTF 40 T-1000

Art. no. 606791

Stainless steel insertion probe, t-handle, FL 1000 mm, with 1 m cable and BNC plug

## GTF 40 T-1500

Art. no. 606792

Stainless steel insertion probe, t-handle, FL 1500 mm, with 1 m cable and BNC plug

## ST-G1000

Art. no. 611373

Protection bag, leather